

Gen 2 Warn relay wiring diagram

Brown – Common Ground to the relay block

Blue – Goes to the blue post of the junction box is winch IN

Black – Goes to the orange post of the junction box is winch OUT

Motor

A - Armature - It will be positive with both in and out functions active

F1 – Winch IN – will positive when active and negative when not active

F2 – Winch OUT - will positive when active and negative when not active

Ground (Not shown) - is thru the winch frame to the winch mount bolts to the hoist top frame ground to the chassis of the truck

