


STOP SWITCH BY-PASS PROCEDURE

Procedure to by-pass the winch stop switch from the system. (This is only for electric winch hoist systems, as hydraulic winch hoist system stop switch does not have connectors.)

Step 1) Locate the winch stop switch, which is on the passenger side top frame rail behind the cab by the winch. (On Gen II hoist the stop switch is found on drivers' side of hoist.)

Step 2) Disconnect the winch stop switch's connector.

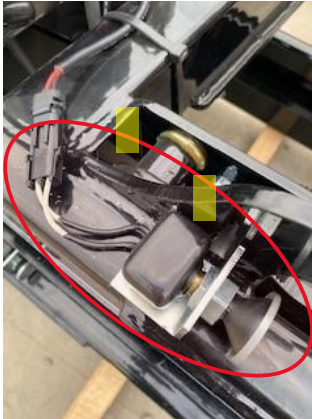

Step 3) Use a jumper wire to complete the circuit to winch stop switch's connector that goes to the winch.



Step 4) Using the pendant controller, try to winch in.

Step 5) If the winch function works, you know its winch stop switch failure.

Gen 1 Replacement Switch-N-Go Stop Switch Assembly P/N 4210129

Gen 2 Replacement Switch-N-Go Stop Switch Plunger P/N 3790033

If the winch in function does not work, contact your local dealer to schedule an appointment for diagnostic test. Click this link switchngo.com/locator to find a dealer near you.