




HOIST SYSTEM LOADING A BODY

Excerpt from Operator Manual

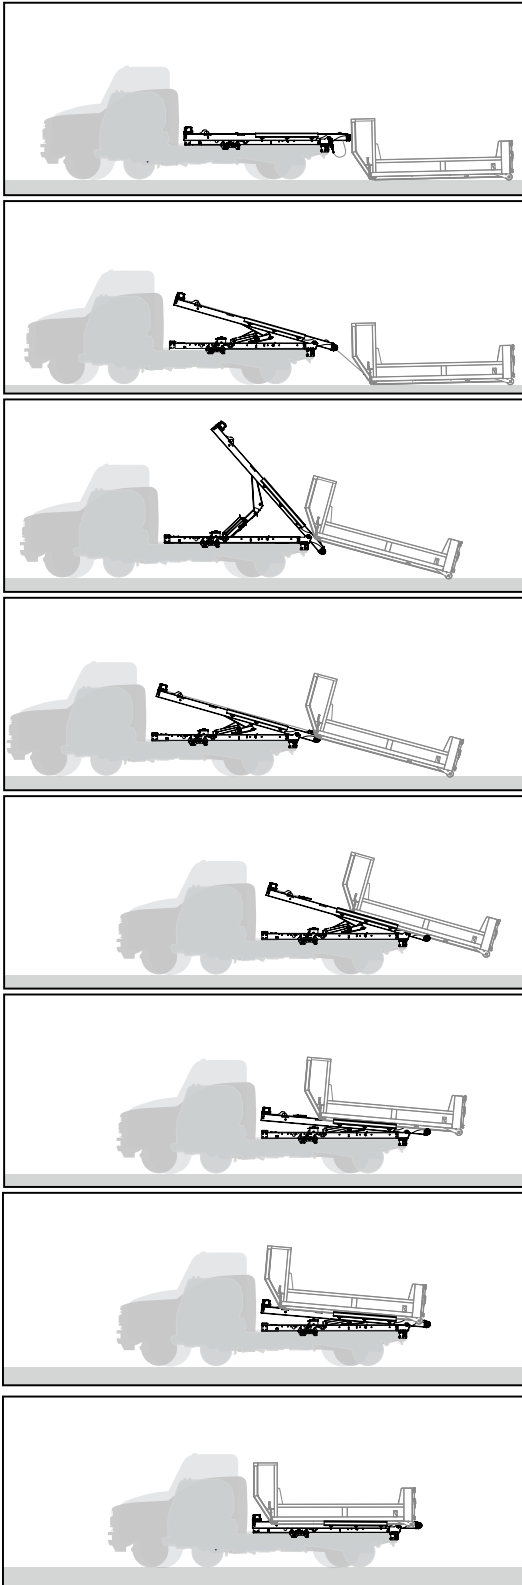

- Step 1—** Back the vehicle until the yellow rear rollers are near the front uprights of the unloaded truck body and ensure the vehicle is in line with the truck body.
- Step 2—** Attach the cable hook to the load pin on the truck body. Ensure the safety keeper on the cable hook is securely closed.
- Step 3—** Slowly pull your truck forward, putting slight tension on the cable.
- Step 4—** Connect the control pendant to a control receptacle located either inside the vehicle's cab or on the hoist system's subframe.
- Step 5—** Before putting the truck in neutral, ensure it is on level ground. Press the button marked winch "IN" while ensuring the winch cable is properly directed through the center V-roller. This will draw the truck closer to the body. The truck body's front uprights should be centered between the yellow rear rollers.
- Step 6—** Press the button marked hoist "UP" using the reference below as a guide:
- a** When loading with the operator outside the vehicle cab, make sure to ENGAGE THE VEHICLE'S PARKING BRAKE.
 - b** When loading with the operator inside the vehicle cab: DISENGAGE THE VEHICLE'S PARKING BRAKE AND PLACE THE VEHICLE IN NEUTRAL. This will allow the vehicle to drive under the loaded body as you pull the winch "IN".
- Step 7—** When the body's long sills (bottom rails) reach the yellow rear rollers, press the button marked hoist "DOWN" to nearly match the angle of the body's runner rails.
- Step 8—** Press the button marked winch "IN" until the truck body's rear rollers are off the ground.
- Step 9—** Press the button marked hoist "DOWN" until the top frame is about 10" above the subframe, as this will relieve the winch draw due to pulling the truck body against the force of gravity.
- Step 10—** Press the button marked winch "IN" at this lower angle until the truck body comes against the front stops. The winch stop switch will shut-off and halt winching the body inward.
- Step 11—** Press the button marked hoist "DOWN" to rest the top frame onto the subframe of the hoist system. This locks the front body lock to the subframe of the hoist system.
- Step 12—** Locate and insert the body lock safety pin into the hole on the driver-side hoist system's top frame near the front body lock.
- Step 13—** Disconnect control pendant from the control receptacle and safely stow away inside the cab.

Refer to Operator Manual, for complete guide to operating the Switch-N-Go E & H Series Hoist System

Scan This Code
to see an instructional video or
visit us at

switchngo.com/operate

