

ATC Remote “Clearing Code” Instructions

- * The Receiver can hold up to 3 Transmitter Codes.
- * To clear all codes:
 - Depress and hold the learn button on the receiver board. The yellow LED light will start to flash.
 - Hold until light comes on solid and then flashes slowly. At this point the Receiver is cleared of all Transmitter Codes.
 - Release the button and the light will blink fast again for a learn cycle.
 - To exit “learn mode”, push and release receiver board learn button. Light will change to constant on. The unit will also exit “learn mode” upon 30 seconds of no activity.

ATC Remote Learning Instructions

- * Depress and hold the learn button on the receiver board until yellow LED starts to flash, then release button.
- * Push and hold the “On/Off” button on the transmitter until the yellow LED on the receiver board comes on constant. Release the “On/Off” button. Transmitter is now learned.
- * Option: Learn a 2nd or 3rd transmitter repeating step 2. Note: Receiver board remains in “learn mode” as long as yellow LED is flashing.
- * To exit “learn mode”, push and release receiver board learn button. Light will change to constant on. The unit will also exit “learn mode” upon 30 seconds of no activity.