

# SWITCH-N-GO CONTRACTOR SERVICE BODY TOOLBOX & TAILGATE MOUNTING RECOMMENDATIONS

## HARDWARE RECOMMENDATIONS:

### FLOOR MOUNTING:

WHEN DRILLING MOUNTING HOLES, MAKE SURE TO MISS CROSS SUPPORTS UNDER BODY

### 48" BOXES, PER BOX:

8X 5/16" X 1.25" FULL THREAD HEX BOLT

8X 5/16" LOCK NUT

16X 5/16" FLAT WASHER

### 36" BOXES, PER BOX:

6X 5/16" X 1.25" FULL THREAD HEX BOLT

6X 5/16" LOCK NUT

12X 5/16" FLAT WASHER

### SIDE WALL MOUNTING:

KEEP HARDWARE CLOSE TO EDGE TO DRAW TOOLBOXES TOGETHER

### ALL BOXES: BETWEEN TOOLBOXES



4X 5/16" X 1.25" FULL THREAD HEX BOLT

4X 5/16" LOCK NUT

8X 5/16" FLAT WASHER

### OPTIONAL HARDWARE:

RUBBER WASHER TO HELP REDUCE WATER FROM ENTERING TOOLBOXES

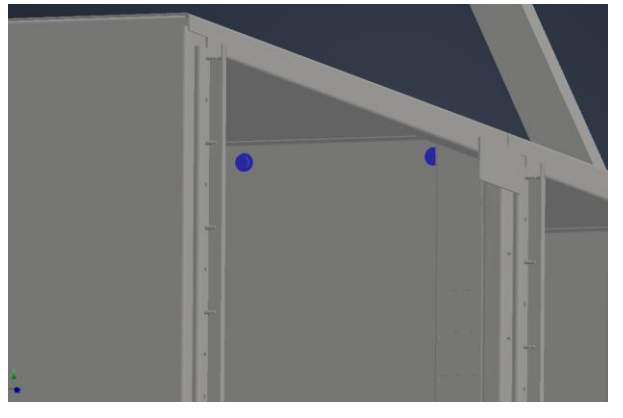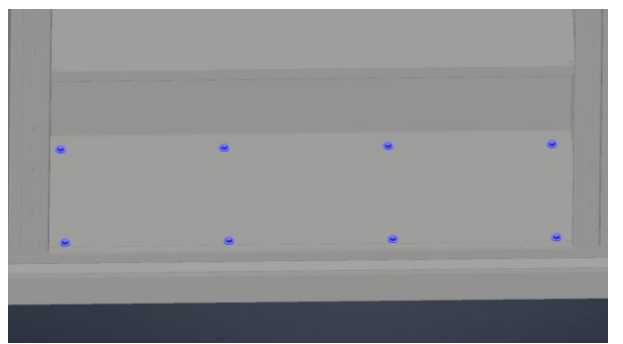

**MOUNTING RECOMMENDATIONS:** Layout locations of toolboxes chosen. Drill holes in floor to mount the bottom of boxes (take into consideration floor supports). Start by mounting 1<sup>st</sup> toolbox against bulkhead, drill and bolt to bulkhead and floor. Use clamps to align following boxes with the first box, drill and bolt between boxes and floor to secure remaining boxes. Repeat for opposite side.

**TAILGATE MOUNTING:** After mounting toolboxes, center and level tailgate bracket. Drill and bolt the bottom of this bracket. Next, drill and bolt sides of tailgate bracket to 2 rear toolboxes (check for interferences on inside of toolboxes). Once fully mounted install tailgate to bracket.

